Americas

Atlanta - 678-957-9614 Boston - 774-760-0087 Chicago - 630-285-0071 Cleveland - 216-447-0464 Dallas - 972-818-7423 Detroit - 248-538-2250 Kokomo - 765-864-8360 Los Angeles - 949-462-9523 Phoenix - 480-792-7200 Santa Clara - 408-961-6444 Toronto - 905-673-0699

Asia/Pacific

Australia - Sydney - 61-2-9868-6733 China - Beijing - 86-10-8528-2100 China - Chengdu - 86-28-8665-5511 China - Chongging - 86-23-8980-9588 China - Hong Kong SAR - 852-2401-1200 China - Nanjing- 86-25-8473-2460 China - Qingdao - 86-532-8502-7355 China - Shanghai - 86-21-5407-5533 China - Shenyang - 86-24-2334-2829 China - Shenzhen - 86-755-8203-2660 China - Wuhan - 86-27-5980-5300 China - Xiamen - 86-592-2388138 China - Xian - 86-29-8833-7252 China - Zhuhai - 86-756-3210040 India - Bangalore - 91-80-3090-4444 India - New Delhi - 91-11-4160-8631 India - Pune - 91-20-2566-1512 Japan - Yokohama - 81-45-471-6166 Korea - Daegu - 82-53-744-4301 Korea - Seoul - 82-2-554-7200 Malaysia - Kuala Lumpur - 60-3-6201-9857 Malaysia - Penang - 60-4-227-8870 Philippines - Manila - 63-2-634-9065 Singapore - 65-6334-8870 Taiwan - Hsin Chu - 886-3-6578-300 Taiwan - Kaohsiung - 886-7-213-7830 Taiwan - Taipei - 886-2-2500-6610 Thailand - Bangkok - 66-2-694-1351



Microchip Technology Inc. • 2355 West Chandler Blvd. • Chandler, AZ 85224-6199

www.microchip.com

The Microchip name and logo, the Microchip logo, and MPLAB are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries. All other trademarks mentioned herein are property of their respective companies. © 2010, Microchip Technology Incorporated, Printed in the U.S.A. All Rights Reserved. 08/10

DS51942A

MRF89XAMxA PICtail[™]/PICtail Plus Daughter **Board Information Sheet**

Overview

The MRF89XAMxA PICtail[™]/PICtail Plus Daughter Board is a demonstration and development daughter board for the following modules:

- MRF89XAM8A Ultra Low-Power Sub-GHz Transceiver module 868 MHz (AC164138-1)
- MRF89XAM9A Ultra Low-Power Sub-GHz Transceiver module 915 MHz (AC164138-2)

The daughter board can be plugged into multiple Microchip Technology demonstration and development boards. For example, the daughter board is appropriate for 8-bit microcontroller development using the PIC18 Explorer Board (DM183032) or for 16-bit and 32-bit microcontroller development using the Explorer 16 Development Board (DM240001).

User's Guide

The "MRF89XAMxA PICtailTM/PICtail Plus Daughter Board User's Guide" (DS70653A) is available for download from the Microchip website http://www.microchip.com/wireless. The User's Guide contains more detailed information on the features, operation, schematics and Printed Circuit Board (PCB).

Software

Sample source code is available at Microchip Wireless Design Environment, Microchip Wireless Media Access Controller (MiMAC) and Microchip Wireless Application Programming Interface (MiApp), and each are described in Application Notes AN1283 and AN1284. A Quick Start Guide is included in the software installation package that explains the installation and operation of the demonstration program. The Quick Start Guide is available for download from the Microchip website http://www.microchip.com/wireless.

The MRF89XA Radio Utility Driver Program provides design engineers a development and testing utility program that operates on the PIC18 Explorer Board (DM183032) and Explorer 16 Development Board (DM240001). This program is available for download from the Microchip website http://www.microchip.com/wireless, and detailed information is given in the Application Note AN1340.

Operation

Programming and configuration options for the MRF89XAMxA transceiver modules are provided in the "MRF89XA Ultra Low-Power, Integrated ISM Sub-GHz Transceiver Data Sheet" (DS70622).

Sample source code is the best place to start. Refer to the compile options when enabling the MRF89XAMxA transceiver modules.

CAUTION

Voltage and current to the MRF89XAMxA PICtailTM/PICtail Plus Daughter Board should be in the range of 2.1-3.6V. Ensure that the daughter board is plugged into a development/demonstration board that meets this power requirement; otherwise, damage to the MRF89XAMxA PICtailTM/PICtail Plus Daughter Board may occur.

Jumper Configuration

Power Disconnect/Current Measure Jumpers (JP1/JP2) - Two 2-pin headers are connected in parallel. A shunt connects power to the MRF89XAMxA module. A current meter can be placed on the header and shunt can be removed to measure the current consumption.

TIP: To prevent power interruption to the MRF89XAMxA module, keep the shunt on the header while connecting the current meter. After connecting, remove the shunt to measure current.

INT2 Jumper (JP3) - For the PIC18 Explorer Board, jumpering JP3 with a shunt allows the connection of RA5 to RB2/INT2 and enables push-button switch S2 to trigger an interrupt.

Spain - Madrid - 34-91-708-08-90 UK - Wokingham - 44-118-921-5869

Europe

Austria - Weis - 43-7242-2244-39

France - Paris - 33-1-69-53-63-20

Italy - Milan - 39-0331-742611

Germany - Munich - 49-89-627-144-0

Netherlands - Drunen - 31-416-690399

08/04/10

Denmark - Copenhagen - 45-4450-2828