

# **Solid State Relays G3NA**

# The reliable choice for Hockey-puck-style Solid State Relays. Available in a Wide Range of Currents.

- All models feature the same compact dimensions to provide a uniform mounting pitch.
- Built-in varistor effectively absorbs external surges.
- Operation indicator enables monitoring operation.
- Protective cover for greater safety.
- Certified by UL, CSA, and TÜV.





## **Model Number Structure**

## **■** Model Number Legend



1. Basic Model Name

G3NA: Solid State Relay

2. Load Power Supply

Blank: AC output D: DC output

3. Rated Load Power Supply Voltage

2: 200 VAC or 200 VDC

4: 400 VAC

4. Rated Load Current

Note: Not all combinations of current and voltage are available.

05: 5 A 10: 10 A 20: 20 A 25: 25 A 40: 40 A 50: 50 A 75: 75 A 90: 90 A 5. Terminal Type

B: Screw terminals

6. Zero Cross Function

Blank: Equipped with zero cross function

(AC-output models only)

7. Certification

Blank: Models certified by UL and CSA UTU: Certified by UL, CSA, and TÜV

8. RoHS Conformance

Blank: Non RoHS conformance

(G3NA-275B, -290B, -425B, -450B, -475B, -490B se-

ries only)

2: RoHS conformance

# **Ordering Information**

## **■** List of Models

Isolation	Isolation Zero cross Indicator function		Applicable output load (See note 1.)	Rated input voltage	Model
Phototriac	Yes	Yes	5 A at 24 to 240 VAC	5 to 24 VDC	G3NA-205B-UTU DC5-24
Photocoupler			(See note 2.)	100 to 120 VAC	G3NA-205B-UTU AC100-120
				200 to 240 VAC	G3NA-205B-UTU AC200-240
Phototriac			10 A at 24 to 240 VAC	5 to 24 VDC	G3NA-210B-UTU DC5-24
Photocoupler			(See note 2.)	100 to 120 VAC	G3NA-210B-UTU AC100-120
				200 to 240 VAC	G3NA-210B-UTU AC200-240
Phototriac			20 A at 24 to 240 VAC	5 to 24 VDC	G3NA-220B-UTU DC5-24
Photocoupler			(See note 2.)	100 to 120 VAC	G3NA-220B-UTU AC100-120
				200 to 240 VAC	G3NA-220B-UTU AC200-240
Phototriac			40 A at 24 to 240 VAC	5 to 24 VDC	G3NA-240B-UTU DC5-24
Photocoupler			(See note 2.)	100 to 120 VAC	G3NA-240B-UTU AC100-120
				200 to 240 VAC	G3NA-240B-UTU AC200-240
Phototriac			50 A at 24 to 240 VAC	5 to 24 VDC	G3NA-250B-UTU DC5-24
Photocoupler			(See note.)	100 to 120 VAC	G3NA-250B-UTU AC100-120
				200 to 240 VAC	G3NA-250B-UTU AC200-240
Phototriac			75 A at 24 to 240 VAC	5 to 24 VDC	G3NA-275B-UTU-2 DC5-24
			(See note 2.)		G3NA-275B-UTU DC5-24 (See note 3.)
Photocoupler				100 to 120 VAC	G3NA-275B-UTU-2 AC100-240
					G3NA-275B-UTU AC100-240 (See note 3.)
Phototriac			90 A at 24 to 240 VAC	5 to 24 VDC	G3NA-290B-UTU-2 DC5-24
Photocoupler			(See note 2.)		G3NA-290B-UTU DC5-24 (See note 3.)
Photocoupler				100 to 240 VAC	G3NA-290B-UTU-2 AC100-240
					G3NA-290B-UTU AC100-240 (See note 3.)
			10 A at 200 to 480 VAC	5 to 24 VDC	G3NA-410B-UTU DC5-24
				100 to 240 VAC	G3NA-410B-UTU AC100-240
			25 A at 200 to 480 VAC	5 to 24 VDC	G3NA-425B-UTU-2 DC5-24
					G3NA-425B-UTU DC5-24 (See note 3.)
				100 to 240 VAC	G3NA-425B-UTU-2 AC100-240
					G3NA-425B-UTU AC100-240 (See note 3.)
			50 A at 200 to 480 VAC	5 to 24 VDC	G3NA-450B-UTU-2 DC5-24
					G3NA-450B-UTU DC5-24 (See note 3.)
				100 to 240 VAC	G3NA-450B-UTU-2 AC100-240
					G3NA-450B-UTU AC100-240 (See note 3.)
			75 A at 200 to 480 VAC	5 to 24 VDC	G3NA-475B-UTU-2 DC5-24
			(See note 2.)		G3NA-475B-UTU DC5-24 (See note 3.)
				100 to 240 VAC	G3NA-475B-UTU-2 AC100-240
					G3NA-475B-UTU AC100-240 (See note 3.)
			90 A at 200 to 480 VAC	5 to 24 VDC	G3NA-490B-UTU-2 DC5-24
			(See note 2.)		G3NA-490B-UTU DC5-24 (See note 3.)
				100 to 240 VAC	G3NA-490B-UTU-2 AC100-240
					G3NA-490B-UTU AC100-240 (See note 3.)
		1	10 A at 5 to 200 VDC	5 to 24 VDC	G3NA-D210B-UTU DC5-24
				100 to 240 VAC	G3NA-D210B-UTU AC100-240

<sup>\*</sup>All models are certified by UL, CSA, and TÜV.

Note: 1. The applicable output load depends on the ambient temperature. Refer to Load Current vs. Ambient Temperature in Engineering Data.

<sup>2.</sup> Loss time increases under 75 VAC. (Refer to page 14.) Confirm operation with the actual load.

<sup>3.</sup> Discontinuation models in January 2012. (Non RoHS conformance models)

# ■ Accessories (Order Separately) One-touch Mounting Plates

Model
R99-12 FOR G3NA

## **Heat Sinks**

## Slim Models Enabling DIN-track Mounting

Model	Applicable SSR
Y92B-N50	G3NA-205B-UTU, G3NA-210B-UTU, G3NA-D210B-UTU, G3NA-410B-UTU
Y92B-N100	G3NA-220B-UTU, G3NA-425B-UTU(-2)
Y92B-N150	G3NA-240B-UTU, G3NA-250B-UTU
Y92B-P250	G3NA-450B-UTU(-2)
Y92B-P250NF	G3NA-275B-UTU(-2), G3NA-290B-UTU(-2), G3NA-475B-UTU(-2), G3NA-490B-UTU(-2)

# **Mounting Bracket**

Model	Applicable SSR
R99-11	G3NA-240B-UTU, G3NA-250B-UTU, G3NA-450B- UTU(-2)

#### **Low-cost Models**

Model	Applicable SSR
Y92B-A100	G3NA-205B-UTU, G3NA-210B-UTU, G3NA-D210B-UTU, G3NA-220B-UTU, G3NA-410B-UTU, G3NA-425B-UTU(-2)
Y92B-A150N	G3NA-240-B-UTU

# **Specifications**

## **■** Ratings

## Input (at an Ambient Temperature of 25°C)

Model	Rated voltage	Operating	Impedance	Voltage	Voltage level		
	voltage		(See note 1.)	Must operate voltage	Must release voltage		
G3NA-2□□B-UTU	5 to 24 VDC	4 to 32 VDC	15 mA max. (See note 2.)	4 VDC max.	1 VDC min.		
	100 to 120 VAC	75 to 132 VAC	36 kΩ±20% (See note 4.)	75 VAC max. (See note 3.)	20 VAC min. (See note 3.)		
	200 to 240 VAC	150 to 264 VAC	72 kΩ±20%	150 VAC max. (See note 3.)	40 VAC min. (See note 3.) (See note 5.)		
G3NA-4□□B-UTU(-2)	5 to 24 VDC	4 to 32 VDC	7 mA max. (See note 2.)	4 VDC max.	1 VDC min.		
	100 to 240 VAC	75 to 264 VAC	72 kΩ±20%	75 VAC max.	20 VAC min.		
G3NA-275B-UTU(-2)	5 to 24 VDC	4 to 32 VDC	15 mA max. (See note 2.)	4 VDC max.	1 VDC min.		
G3NA-290B-UTU(-2) G3NA-475B-UTU(-2) G3NA-490B-UTU(-2) G3NA-D210B-UTU(-2)	100 to 240 VAC	75 to 264 VAC	72 kΩ±20%	75 VAC max.	20 VAC min.		

Note: 1. The input impedance is measured at the maximum value of the rated supply voltage (for example, with the model rated at 100 to 120 VAC, the input impedance is measured at 120 VAC).

- 2. With constant current input circuit system.
- 3. Refer to Temperature Characteristics (for Must Operate Voltage and Must Release Voltage) in Engineering Data for further details.
- **4.** The G3NA-240B-UTU is  $72k\Omega\pm20\%$ .
- 5. The G3NA-240B-UTU is 20 VAC min.

## **Output**

Model	Applicable load						
	Rated load	Load voltage	Load curre	Inrush current			
	voltage range		With heat sink (See note 2.)	Without heat sink			
G3NA-205B-UTU	24 to 240 VAC	19 to 264 VAC	0.1 to 5 A (at 40°C)	0.1 to 3 A (at 40°C)	60 A (60 Hz, 1 cycle)		
G3NA-210B-UTU	1		0.1 to 10 A (at 40°C)	0.1 to 4 A (at 40°C)	150 A (60 Hz, 1 cycle)		
G3NA-410B-UTU	200 to 480 VAC	180 to 528 VAC	0.2 to 10 A (at 40°C)	0.2 to 4 A (at 40°C)			
G3NA-220B-UTU	24 to 240 VAC	19 to 264 VAC	0.1 to 20 A (at 40°C)	0.1 to 4 A (at 40°C)	220 A (60 Hz, 1 cycle)		
G3NA-425B-UTU	200 to 480 VAC	180 to 528 VAC	0.2 to 25 A (at 40°C)	0.2 to 4 A (at 40°C)			
G3NA-240B-UTU	24 to 240 VAC	19 to 264 VAC	0.1 to 40 A (at 40°C)	0.1 to 6 A (at 40°C)	440 A (60 Hz, 1 cycle)		
G3NA-250B-UTU	24 to 240 VAC	19 to 264 VAC	0.1 to 50 A (at 40°C)	0.1 to 6 A (at 40°C)			
G3NA-450B-UTU(-2)	200 to 480 VAC	180 to 528 VAC	0.2 to 50 A (at 40°C)	0.2 to 6 A (at 40°C)			
G3NA-275B-UTU(-2)	24 to 240 VAC	19 to 264 VAC	1 to 75 A (at 40°C)	1 to 7 A (at 40°C)	800 A (60 Hz, 1 cycle)		
G3NA-475B-UTU(-2)	200 to 480 VAC	180 to 528 VAC	1 to 75 A (at 40°C)	1 to 7 A (at 40°C)	800 A (60 Hz, 1 cycle)		
G3NA-290B-UTU(-2)	24 to 240 VAC	19 to 264 VAC	1 to 90 A (at 40°C)	1 to 7 A (at 40°C)	1,000 A (60 Hz, 1 cycle)		
G3NA-490B-UTU(-2)	200 to 480 VAC	180 to 528 VAC	1 to 90 A (at 40°C)	1 to 7 A (at 40°C)	1,000 A (60 Hz, 1 cycle)		
G3NA-D210B-UTU(-2)	5 to 200 VDC	4 to 220 VDC	0.1 to 10 A (at 40°C)	0.1 to 4 A (at 40°C)	20 A (10 ms)		

Note: 1. The load current varies depending on the ambient temperature. Refer to Load Current vs. Ambient Temperature under Engineering Data.

<sup>2.</sup> When an OMRON Heat Sink (refer to Options) or a heat sink of the specified size is used.


## OMRON


# **■** Characteristics


Item	G3NA- 205B- UTU	G3NA- 210B- UTU	G3NA- 220B- UTU	G3NA- 240B- UTU	G3NA- 250B- UTU	G3NA- 410B- UTU	G3NA- 425B- UTU(-2)	G3NA- 450B- UTU(-2)	G3NA- 275B- UTU(-2)	G3NA- 290B- UTU(-2)	G3NA- 475B- UTU(-2)	G3NA- 490B- UTU(-2)	G3NA- D210B- UTU
Operate time	3/2 of load power source cycle + 1 ms max. (AC input)							1/2 of load power source cycle + 1 ms max. (DC input) 3/2 of load power source cycle + 1 ms max. (AC input)				1 ms max. (DC input) 30 ms max. (AC input)	
Release time	1/2 of load power source cycle + 1 ms max. (DC input) 3/2 of load power source cycle + 1 ms max. (AC input)							1/2 of load power source cycle + 1 ms max. (DC input) 3/2 of load power source cycle + 1 ms max. (AC input)				5 ms max. (DC input) 30 ms max. (AC input)	
Output ON voltage drop	1.6 V (RMS) max. 1.8 V (RMS) max.						1.6 V (RM	IS) max.	1.8 V (RM	IS) max.	1.5 V max.		
Leakage current	5 mA max. (at 100 VAC) 10 mA max. (at 200 VAC)					10 mA max. (at 200 VAC) 20 mA max. (at 400 VAC)		5 mA max. (at 100 VAC) 10 mA max. (at 200 VAC)		10 mA max. (at 200 VAC) 20 mA max. (at 400 VAC)		5 mA max. (at 200 VDC)	
Insulation resistance	100 MΩ n	nin. (at 50	0 VDC)										
Dielectric strength	2,500 VA	C, 50/60 H	lz for 1 mi	in					4,000 VAC, 50/60 Hz for 1 min				2,500 VAC, 50/60 Hz for 1 min
Vibration resistance	Destruction	on: 10 to 5	55 to 10 H	z, 0.75-mı	m single a	amplitude	(1.5-mm c	ouble am	plitude)				
Shock resistance	Destruction	Destruction: 1,000 m/s <sup>2</sup>											
Ambient tempera- ture	Operating: -30°C to 80°C (with no icing or condensation) Storage: -30°C to 100°C (with no icing or condensation)												
Ambient humidity	Operating	: 45% to	85%										
Weight	Approx. 6	0 g		Approx. 7	'0 g	Approx. 8	30 g		Approx. 120 g			Approx. 70 g	


# **Engineering Data**


## **Load Current vs. Ambient Temperature**

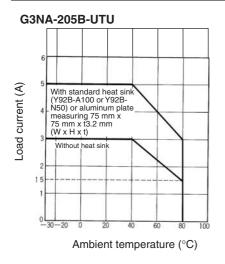


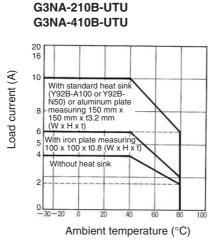


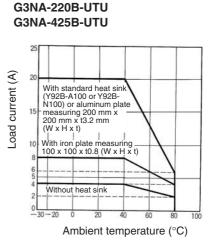


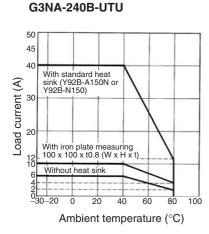

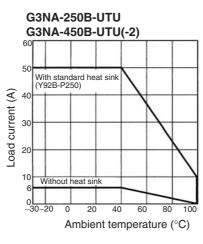

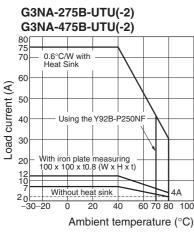

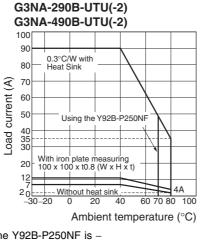


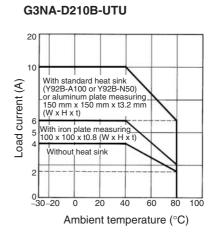



**Note:** The ambient operating temperature of the Y92B-P250NF is - 30 to 70 $^{\circ}$ C. Be sure the operating temperature is within this range.

## **One Cycle Surge Current**


The values shown by the solid line are for non-repetitive inrush currents. Keep the inrush current below the values shown by the dotted line if it occurs repetitively.

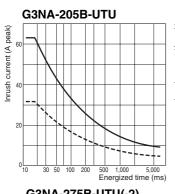

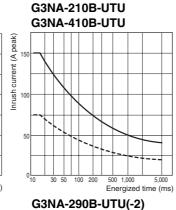

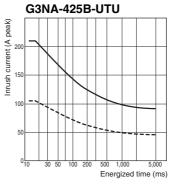


G3NA-220B-UTU

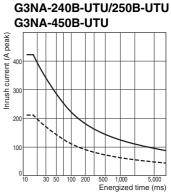


G3NA-275B-UTU(-2) G3NA-475B-UTU(-2)

80


700 600 500

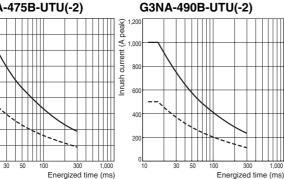


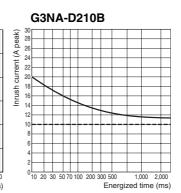

Temperature
Characteristics
(for Must Operate
Voltage and Must
Release Voltage)

# Heat Sink Area vs. Load Current

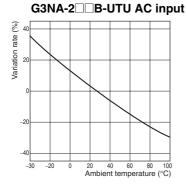

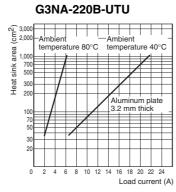

**Note:** The heat sink area refers to the combined area of the sides of the heat sink that radiate heat. For example, when a current of 18 A is allowed to flow through the SSR at 40°C, the graph shows that the heat sink area is about 450 cm². Therefore, if the heat sink is square, one side of the heat sink must be 15 cm  $(\sqrt{450~(\text{cm}^2)/2})$  or longer.

# <u>Thermal Resistance Rth (Back of Junction SSR) (Examples)</u>

Model	Rth (°C/W)
G3NA-205B-UTU	3.22
G3NA-210B-UTU	2.62
G3NA-220B-UTU	1.99
G3NA-240B-UTU	0.45
G3NA-250B-UTU	0.45
G3NA-275B-UTU G3NA-475B-UTU G3NA-290B-UTU G3NA-490B-UTU	0.45
G3NA-D210B-UTU	2.62

# Thermal Resistance Rth of Heat Sinks (Examples)

Model	Rth (°C/W)
Y92B-N50	2.8
Y92B-N100	1.63
Y92B-N150	1.38
Y92B-A100	1.63
Y92B-A150N	1.37
Y92B-A250	1.00
Y92B-P250NF	0.46


Note: When using a commercially available heat sink, use one with a thermal resistance equal to or less that the OMRON Heat Sink.

## **Dimensions**

## ■ Relays


Note: All units are in millimeters unless otherwise indicated.

#### G3NA-205B-UTU, G3NA-210B-UTU, G3NA-220B-UTU, G3NA-410B-UTU, G3NA-425B-UTU

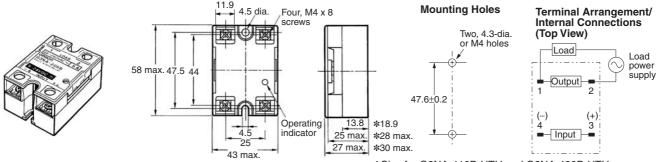


\*Size for G3NA-410B-UTU and G3NA-420B-UTU.

#### G3NA-240B-UTU, G3NA-250B-UTU, G3NA-450B-UTU(-2)

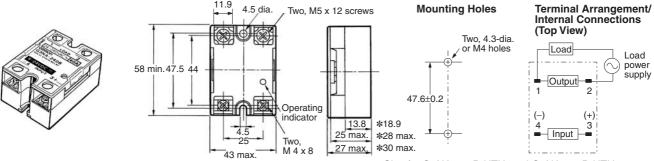


\*Size for G3NA-240B-UTU, and G3NA-450B-UTU-2.

#### G3NA-275B-UTU(-2), G3NA-475B-UTU(-2), G3NA-290B-UTU(-2), G3NA-490B-UTU(-2)

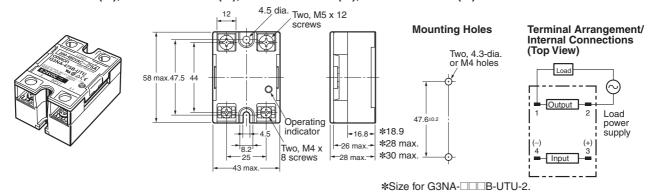

#### G3NA-D210B-UTU



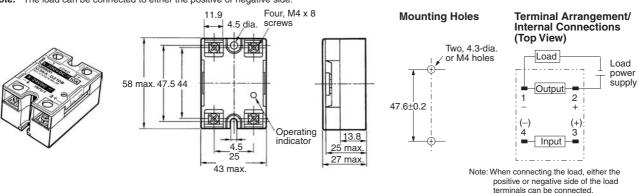


## OMRON

## **■** Options (Order Separately)

## **One-touch Mounting Plate**

The One-touch Mounting Plate is used to mount the GN3A to a DIN Track.

#### R99-12 FOR G3NA (for the G3NA and G3NE)

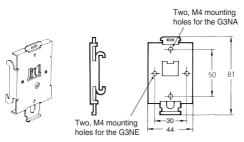

To mount the Relay to DIN
Track, first mount it to the
One-touch Mounting Plate
and then attach it to the DIN
Track as shown in the
diagram.

To remove the Relay from
the DIN Track, pull down on
the tab with a screwdriver in
the direction of the arrow.


- When a Relay is mounted to DIN Track, use it within the rating for a Relay without a heat sink.
- Use the following DIN Tracks: PFP-100N or PFP-100N2.


## **Mounting Bracket**

#### R99-11 (for the G3NA-240B-UTU, G3NA-250B-UTU, G3NA-450B-UTU(-2))

Use Mounting Bracket R99-11 so that the G3NA-240B/-250B/-450B-UTU can be mounted with the same pitch as that of the G3N-240B.





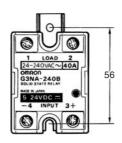


## **Heat Sinks**


#### Y92B-N50 Heat Sink (for the G3NA-205B-UTU, G3NA-210B-UTU, G3NA-410B-UTU, G3NA-D210B-UTU)

For surface mounting, a 30% derating of the load current is required (from the Load Current vs. Ambient Temperature graphs).

The orientation indicated by the external dimensions is not the correct mounting orientation. When opening mounting holes, refer to the mounting hole dimensions.



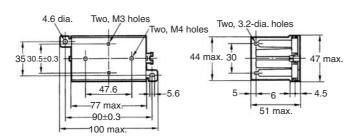




#### Y92B-N100 Heat Sink (for the G3NA-220B-UTU, G3NA-425B-UTU)

For surface mounting, a 30% derating of the load current is required (from the Load Current vs. Ambient Temperature graphs).


The orientation indicated by the external dimensions is not the correct mounting orientation. When opening mounting holes, refer to the mounting hole dimensions.

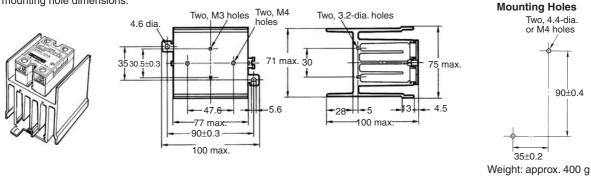


#### Y92B-N150 Heat Sink (for the G3NA-240B-UTU)


For surface mounting, a 30% derating of the load current is required (from the Load Current vs. Ambient Temperature graphs).

The orientation indicated by the external dimensions is not the correct mounting orientation. When opening mounting holes, refer to the mounting hole dimensions.

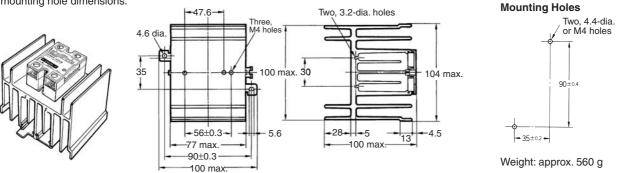

#### Y92B-P250 (for the G3NA-250B-UTU, G3NA-450B-UTU(-2))

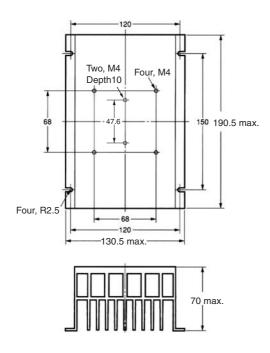


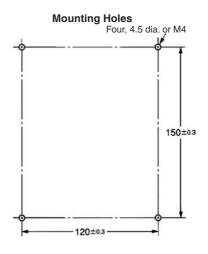



Y92B-A100 Low-cost Heat Sink (for the G3NA-205B-UTU, G3NA-210B-UTU, G3NA-410B-UTU,

G3NA-220B-UTU, Y92B-A150N Low-cost G3NA-410B-UTU, Heat Sink G3NA-425B-UTU(-2), (for the G3NA-240B-UTU)

G3NA-423B-011

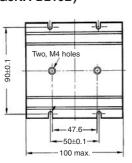

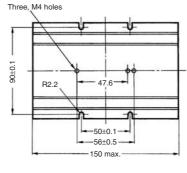


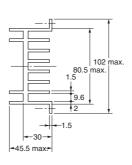

Weight: approx. 210 g

Weight: approx. 310 g

#### Mounting Holes Y92B-A100 Y92B-A150



For surface mounting, a 30% derating of the load current is required (from the *Load Current vs. Ambient Temperature* graphs). The orientation indicated by the external dimensions is not the correct mounting orientation. When opening mounting holes, refer to the mounting hole dimensions.

## **Safety Precautions**

## / CAUTION

Touching the charged section may occasionally cause minor electric shock. Do not touch the G3NA terminal section (the charged section) when the power supply is ON. Be sure to attach the cover before use.



The G3NA and heat sink will be hot and may occasionally cause minor burns. Do not touch the G3NA or the heat sink either while the power supply is ON, or immediately after the power is turned OFF.



The internal snubber circuit is charged and may occasionally cause minor electric shock. Do not touch the G3NA's main circuit terminals immediately after the power is turned OFF.



Be sure to conduct wiring with the power supply turned OFF, and always attach the terminal cover after completing wiring. Touching the terminals when they are charged may occasionally result in minor electric shock.



Do not apply a short-circuit to the load side of the G3NA. The G3NA may rupture. To protect against short-circuit accidents, install a protective device, such as a quickburning fuse, on the power supply line.



## ■ Precautions for Safe Use

Although OMRON continuously strives to improve the quality and reliability of our relays, the G3NA contains semiconductors, which are generally prone to occasional malfunction and failure. Maintaining safety is particularly difficult if a relay is used outside of its ratings. Always use the G3NA within the rated values. When using the G3NA, always design the system to ensure safety and prevent human accidents, fires, and social damage even in the event of G3NA failure, including system redundancy, measures to prevent fires from spreading, and designs to prevent malfunction.

- G3NA malfunction or fire damage may occasionally occur. Do not apply excessive voltage or current to the G3NA terminals.
- 2. Heat Dissipation
  - Do not obstruct the airflow to the G3NA or heat sink. Heat generated from an G3NA error may occasionally cause the output element to short, or cause fire damage.
  - Be sure to prevent the ambient temperature from rising due to the heat radiation of the G3NA. If the G3NA is mounted inside a panel, install a fan so that the interior of the panel is fully ventilated.
  - Mount the G3NA in the specified orientation. If the G3NA is mounted in any other orientation, abnormal heat generation may cause output elements to short or may cause burning.
  - Do not use the G3NA if the heat sink fins are bent, e.g., as the result of dropping the G3NA. Heat dissipation characteristics will be reduced, possibly causing G3NA failure.
  - Apply a thin layer of Momentive Performance Materials's YG6260 or Shin-Etsu Chemical's G747, or a similar product to the heat sink before mounting
  - If a material with high thermal resistance, such as wood, is used, heat generated by the G3NA may occasionally cause fire or burning. When installing the G3NA directly into a control panel so that the panel can be used as a heat sink, use a panel material with low thermal resistance, such as aluminum or steel.
  - Use the specified heat sink or one with equivalent or better characteristics.
- Wire the G3NA and tighten screws correctly, observing the following precautions

Heat generated by a terminal error may occasionally result in fire damage. Do not operate if the screws on the output terminal are loose.

 Abnormal heat generated by wires may occasionally result in fire damage. Use wires suitable for the load current.  Abnormal heat generated by terminals may occasionally result in fire damage. Do not operate if the screws on the output terminal are loose.

#### **Tightening Torque**

Screw size	Tightening torque
M4	1.2 N⋅m
M5	2.0 N⋅m

- Abnormal heat generated by terminals may occasionally result in fire damage. When tightening terminal screws, be sure that no non-conductive foreign matter is caught in screw.
- For GN3A Relays of 40 A or higher, use crimp terminals of an appropriate size for the wire diameter for M5 terminals.
- Do not use any wires with damaged sheaths. These may cause electric shock or leakage.
- Do not place wiring in the same conduit or duct as high-voltage lines. Induction may cause malfunction or damage.
- Use wires of an appropriate length, otherwise malfunction and damage may result due to induction.
- Mount the DIN Track securely. Otherwise, the DIN Track may fall
- Be sure that the G3NA clicks into place when mounting it to DIN Track. The G3NA may fall if it is not mounted correctly.
- Do not mount the G3NA when your hands are oily or dirty, e.g., with metal powder. These may cause G3NA failure.
- Tighten the G3NA screws securely.
   Tightening torque: 0.78 to 0.98 N·m
- Tighten the heat sink screws securely.
   Tightening torque: 0.98 to 1.47 N·m
- 4. Preventing Overheating

When using the High-capacity Heat Sink (Y92B-P250NF), always use a thermostat or other method to protect from overheating in the event that the fan stops.

5. Do Not Touch Fan Blades

When the fan is operating, do not touch the fan blades with any part of your body or allow foreign matter to come into contact with the blades. Always attach the enclosed finger guard when using the G3NA.

- 6. Operating Conditions
  - Only use the G3NA with loads that are within the rated values.
     Using the G3NA with loads outside the rated values may result in malfunction, damage, or burning.
  - Use a power supply within the rated frequency range. Using a power supply outside the rated frequency range may result in malfunction, damage, or burning.
- Do not transport the G3NA under the following conditions. Failure or malfunction may occur.
  - · Conditions under which the G3NA will be exposed to water
  - · High temperatures or high humidity
  - Without proper packing

## OMROF

## **Operating and Storage Locations**

Do not use or store the G3NA in the following locations. Doing so may result in damage, malfunction, or deterioration of performance characteristics.

- Do not use or store in locations subject to direct sunlight.
- Do not use in locations subject to ambient temperatures outside the range –20 to 60°C.
- Do not use in locations subject to relative humidity outside the range 45% to 85% or locations subject to condensation as the result of severe changes in temperature.
- Do not store in locations subject to ambient temperatures outside the range –30 to 70°C.
- Do not use or store in locations subject to corrosive or flammable gases.
- Do not use or store in locations subject to dust (especially iron dust) or salts.
- Do not use or store in locations subject to shock or vibration.
- Do not use or store in locations subject to exposure to water, oil, or chemicals.
- Do not use or store in locations subject to high temperatures or high humidity.
- Do not use or store in locations subject to salt damage.
- Do not use or store in locations subject to rain or water drops.

## ■ Precautions for Correct Use


Please observe the following precautions to prevent failure to operate, malfunction, or undesirable effect on product performance.

## **Before Actual Operation**


- The G3NA in operation may cause an unexpected accident.
   Therefore it is necessary to test the G3NA under the variety of conditions that are possible. As for the characteristics of the G3NA, it is necessary to consider differences in characteristics between individual SSRs.
- 2. Unless otherwise specified, the ratings in this catalog are tested values in a temperature range between 15°C and 30°C, a relative humidity range between 25% and 85%, and an atmospheric pressure range between 88 and 106 kPa (standard test conditions according to JIS C5442). It will be necessary to provide the above conditions as well as the load conditions if the user wants to confirm the ratings of specific G3NAs.

## **Mounting Method**

## **SSR Mounting Pitch (Panel Mounting)**

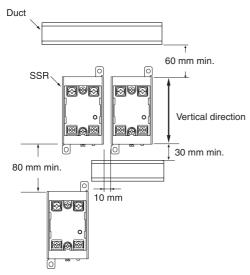

#### Relationship between SSRs and Duct Height

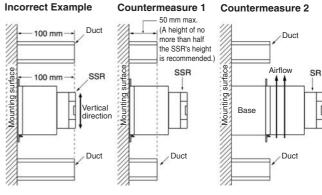


Do not surround the SSR with ducts, otherwise the heat radiation of the SSR will be adversely affected.

Use short ducts.

If the ducts cannot be shortened, place the SSR on a metal base so that it is not surrounded by the ducts.

#### Ventilation Outside the Control Panel

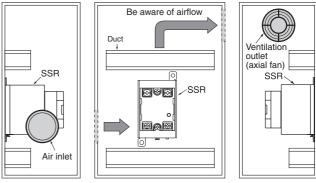

If the air inlet or air outlet has a filter, clean the filter regularly to prevent it from clogging to ensure an efficient flow of air.

Do not locate any objects around the air inlet or air outlet, otherwise the objects may obstruct the proper ventilation of the control panel.

A heat exchanger, if used, should be located in front of the SSRs to ensure the efficiency of the heat exchanger.

- Please reduce the ambient temperature of SSRs.
   The rated load current of an SSR is measured at an ambient temperature of 40°C.
- An SSR uses a semiconductor in the output element. This causes
  the temperature inside the control panel to increase due to heating
  resulting from the passage of electrical current through the load. To
  restrict heating, attach a fan to the ventilation outlet or air inlet of
  the control panel to ventilate the panel. This will reduce the ambient
  temperature of the SSRs and thus increase reliability. (Generally,
  each 10 °C reduction in temperature will double the expected life.)

Load current (A)	5 A	10 A	20 A	40 A	50 A	75 A	90 A
Required number of fans per SSR	0.08	0.16	0.31	0.62	8.0	1.2	1.44

Example: For 10 SSRs with load currents of 10 A,  $0.16 \times 10 = 1.6$ 

Thus, 2 fans would be required.


Size of fans: 92 mm<sup>2</sup>, Air volume: 0.7 m<sup>3</sup>/min, Ambient temperature of control panel: 30 °C

If there are other instruments that generate heat in the control panel other than SSRs, additional ventilation will be required.

## **EMC Directive Compliance (For -UTU type)**

EMC directives can be complied with under the following conditions.

- 1. AC-switching models
- A capacitor must be connected to the input power supply.
- A capacitor, varistor and toroidal core must be connected to the load power supply.
- The input cable must be less than 3 m.




#### 2. DC-switching models



• The input cable must be less than 3 m.


## **Loss Time**

The loss time will increase when the G3NA is used at a low applied voltage or current. Be sure that this does not cause any problems.



## **Using DC Loads**

For a DC or L load, a diode should be connected in parallel the load to absorb the counter electromotive force of the load.



#### **Fuses**

Connect a quick-break fuse in series with the load as a short-circuit protection measure. Use one of the fuses in the following table or one with equivalent or better characteristics.

#### **Recommended Fuses**

G3NA rated load current	Fuse model	Manufacturer	Applicable SSR
5 A	60LFF5	HINODE ELECTRIC CO.,LTD.	G3NA-205B-UTU
8 A	60LFF8		G3NA-210B-UTU
10 A	60LFF10		
15 A	60LFF15		G3NA-220B-UTU
20 A	60LFF20 50SHA20		
25 A	60PFF25 50SHA25		G3NA-240B-UTU
30 A	60PFF30 50SHA30		G3NA-250B- UTU
40 A	50SHA40	]	
45 A	50SHA45		
50 A	50SHA50		
75 A	50SHA75		G3NA-275B-UTU(-2)
80 A	50SHA80	1	G3NA-290B-UTU(-2)
100 A	50SHB100		

## **Reverse Connection**

The output terminal side of the G3NA-D210B is connected to a builtin diode to protect the SSR from damage that may result from reverse connection. The SSR, however, cannot withstand one minute or more if the wires are connected in reverse. Therefore, pay the utmost attention not to make polarity mistakes on the load side.

## ■ Precautions on Operating and Storage Environments

## 1. Operating Ambient Temperature

The rated value for the ambient operating temperature of the G3NA is for when there is no heat build-up. For this reason, under conditions where heat dissipation is not good due to poor ventilation, and where heat may build up easily, the actual temperature of the G3NA may exceed the rated value resulting in malfunction or burning.

When using the G3NA, design the system to allow heat dissipation sufficient to stay below the *Load Current vs. Ambient Temperature* characteristic curve. Note also that the ambient temperature of the G3NA may increase as a result of environmental conditions (e.g., climate or air-conditioning) and operating conditions (e.g., mounting in an airtight panel).

#### 2. Transportation

When transporting the G3NA, observe the following points. Not doing so may result in damage, malfunction, or deterioration of performance characteristics.

- Do not drop the G3NA or subject it to severe vibration or shock.
- Do not transport the G3NA if it is wet.
- Do not transport the G3NA under high temperatures or humidity.
- Do not transport the G3NA without packing it properly.

#### 3. Vibration and Shock

Do not subject the G3NA to excessive vibration or shock. Otherwise the G3NA may malfunction and internal components may be deformed or damaged, resulting in failure of the G3NA to operate.

To prevent the G3NA from abnormal vibration, do not install the G3NA in locations or by means that will subject it to vibration from other devices, such as motors.

#### 4. Solvents

Do not allow the G3NA or the resin portion of the Fan's thermostat to come in contact with solvents, such as thinners or gasoline. Doing so will dissolve the markings on the G3NA.


#### 5. Oil

Do not allow the G3NA terminal cover to come in contact with oil. Doing so will cause the cover to crack and become cloudy.

## ■ Operation

## 1. Leakage Current

A leakage current flows through a snubber circuit in the G3NA even when there is no power input. Therefore, always turn OFF the power to the input or load and check that it is safe before replacing or wiring the G3NA.



## 2. Screw Tightening Torque

Tighten the G3NA terminal screws properly. If the screws are not tight, the G3NA will be damaged by heat generated when the power is ON. Perform wiring using the specified tightening torque.

#### 3. Handling Relays

Do not mount the G3NA when your hands are oily or dirty, e.g., with metal powder. These may cause G3NA failure.

#### 4. Do Not Drop

Be careful not to drop a Relay or Heat Sink onto any part of your body while working. Injury may result. This is particularly true for the High-capacity Heat Sink (Y92B-P250NF), which weighs 2.5 kg.

# **Warranty and Application Considerations**

#### Read and Understand this Catalog

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

#### **Warranty and Limitations of Liability**

#### WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

#### LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS, OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted. IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

#### **Application Considerations**

#### **SUITABILITY FOR USE**

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the products.

Take all necessary steps to determine the suitability of the product for the systems, machines, and equipment with which it will be used. Know and observe all prohibitions of use applicable to this product.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCTS ARE PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

#### **Disclaimers**

#### PERFORMANCE DATA

Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON *Warranty and Limitations of Liability.* 

#### **CHANGE IN SPECIFICATIONS**

Product specifications and accessories may be changed at any time based on improvements and other reasons. Consult with your OMRON representative at any time to confirm actual specifications of purchased product.

#### **DIMENSIONS AND WEIGHTS**

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

#### ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

Cat. No. J166-E1-03 In the interest of product improvement, specifications are subject to change without notice.

## **OMRON Corporation**

Industrial Automation Company

Control Devices Division H.Q. Shiokoji Horikawa, Shimogyo-ku, Kyoto, 600-8530 Japan